

# Primus Digital Home Phone

2


## Quick Start Guide

#### WHAT YOU NEED

- Primus Digital Home Phone Adapter
- 2 Power Adapter and Prong
- **3** Ethernet Cable (blue)
- **4** A working Internet connection

Info: If your network is configured to use static IP addressing, or uses MAC address connections, please use the advanced setup process at: resisupport.primus.ca/en/dhpsetup

If you want to use your existing home telephone wiring with your Digital Home Phone, please see: www.primus.ca/homewiring

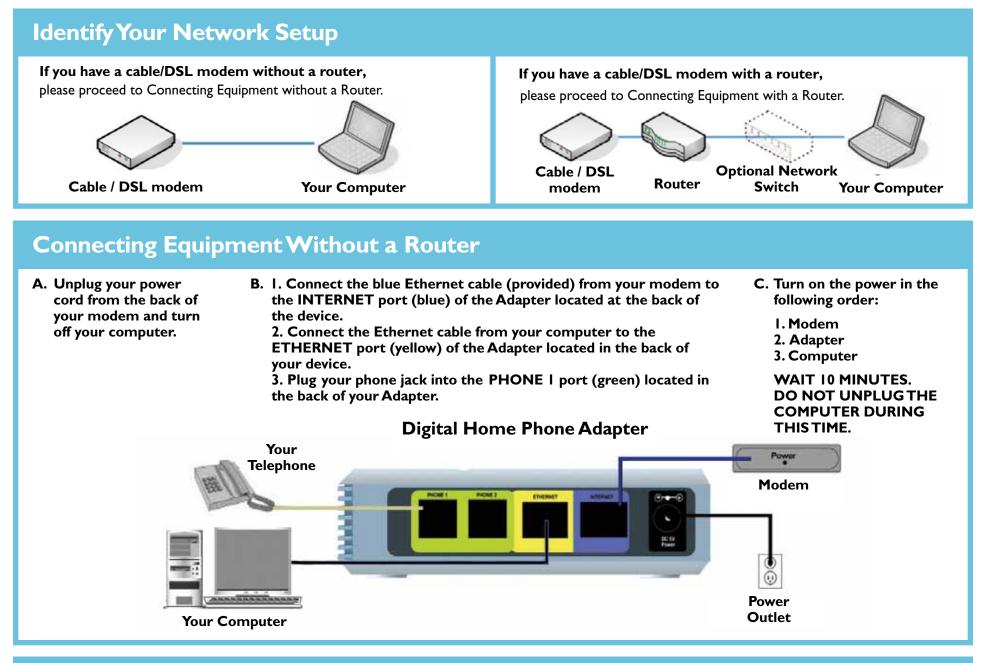

### **Connecting Equipment With a Router**


A. Unplug the power cord from the back of your modem and turn off your computer.

- a free port in back of your router and the other end to the INTERNET port (blue) of the Adapter located at the back of the device.
- 2. Plug your phone jack into the PHONE I port (green) located in the back of your Adapter.
- **B.** I. Connect one end of the blue Ethernet cable (provided) to **C.** Turn on the power in the following order: I. Modem 3.Adapter

3

2. Router 4. Computer

WAIT 10 MINUTES. DO NOT UNPLUG THE COMPUTER DURING THIS TIME.

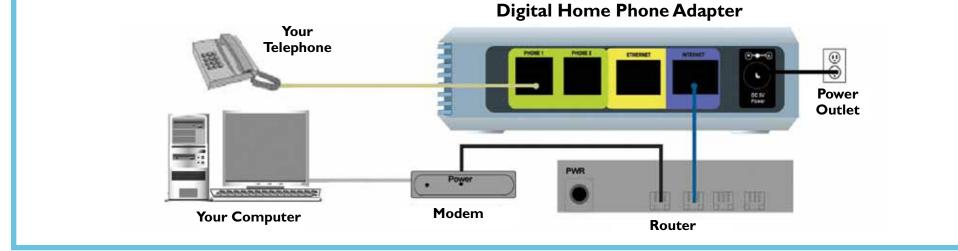

Once the green Phone I light turns on, you are ready to start making calls. Your setup is complete!

Contact us at resisupport.primus.ca or call Technical Support at 1-800-370-0015