



Digital Home Phone Quick Install Guide Grandstream Adapter



For general support or additional self-help guides
visit [primus.ca/support](https://www.primus.ca/support)

Technical Support team at **1-800-370-0015**

0123 Primus Quick Install Guide Grandstream E

primus

primus

Digital Home Phone Quick Install Guide



BEFORE YOU BEGIN:

Review contents of your install kit:

- Analog Telephone Adapter (ATA)
- Power cord
- Ethernet cable


Read through instructions:

You can find additional self-help resources at support.primus.ca.

1 Be sure your **phone cable** is connected to your telephone or cordless phone charging station.
Connect the other end of your phone cable to the **Phone 1 port** on your **ATA**.

2 Connect one end of the **ethernet cable** to the **internet port** on your ATA, and the other end to an available LAN port on your internet modem.
If you are using a WiFi pod or router, connect it to an available LAN port on your WiFi pod or router instead.

3 Attach **power cord** to ATA and connect to an electrical outlet.
After 2 minutes, the power, internet and Phone 1 lights will be on and not flashing.

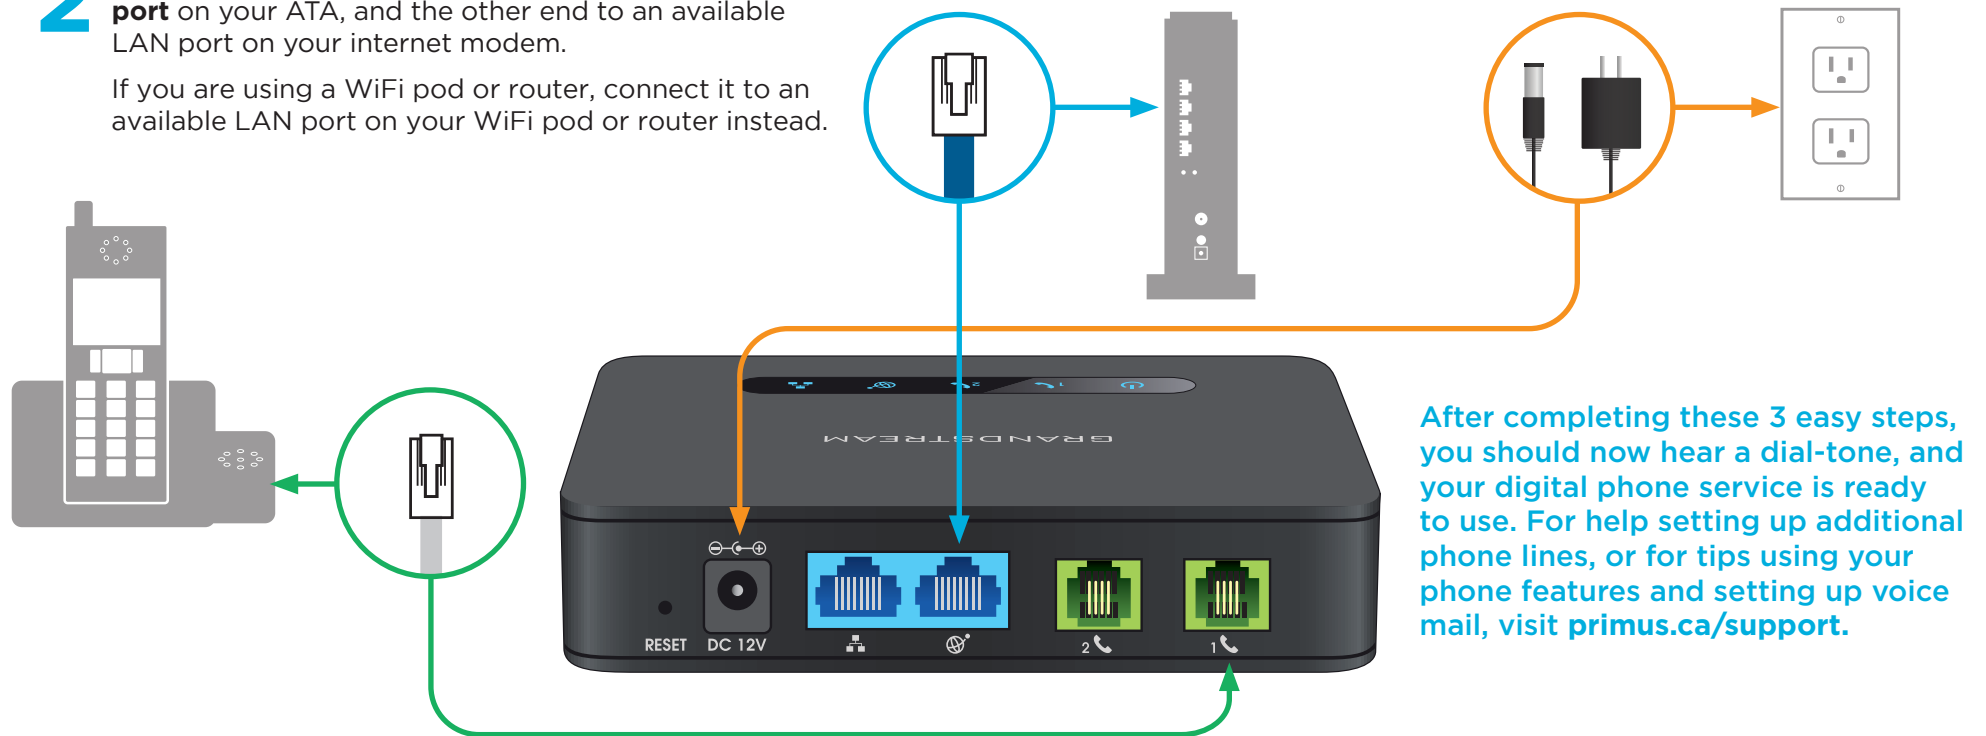

After completing these 3 easy steps, you should now hear a dial-tone, and your digital phone service is ready to use. For help setting up additional phone lines, or for tips using your phone features and setting up voice mail, visit primus.ca/support.

The 911 service provided by Primus differs in an important number of ways from traditional 911 or Enhanced 911 (E911) services available with most traditional telephone lines and has specific limitations relative to E911. For more information, please consult our terms and conditions at primus.ca/terms.